

MED500X2 NO INTERNAL HARD DRIVE FAN INSTRUCTION

1November2011

If your MED500X2 **does not have an internal Hard Drive** installed you can safely disconnect the internal fan.


THIS INSTRUCTION DOES NOT APPLY TO THE MED500X or MED500X-Light

1




Unplug the all cables into the MED500X2 and turn it upside down. Unscrew the two star screws as indicated by the red circle on the image on the left.

2

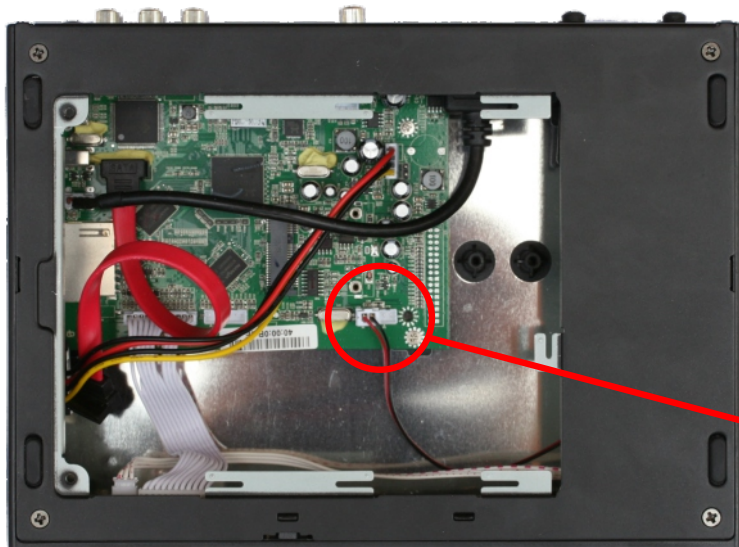

Disconnect the fan connector as indicated in the image on the left. Replace the cover plate and insert and tighten the screws.

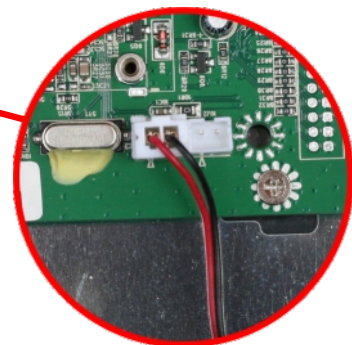

WARNING - If you install an internal Hard Drive at a later stage please remember to reconnect the fan connector.

MEDE8ER™