

Med8er V3.0.2 update 3 June 2010

RTD1073-128M-HMC-M03I-20100603-v7.0.7.r4199.QA20100402_SANJIA_ENGLISH_RC18

USE THE EMERGENCY LOADING PROCEDURE ONLY

Emergency Recovery Procedure

Download the Mede8er V3 Firmware from the Mede8er website. Unzip or Unrar the file and you will find one file named install.img. Copy this file to the root directory of a Flash Drive. Plug the flash drive into the Mede8er. Disconnect the power jack at the rear of the Mede8er then plug it back in - Now press the on/off button and hold it pressed for 10 seconds and then release. After approximately 15 seconds the LED on the Mede8er will flash red-blue and you will get a progress bar on your TV display (some TV's will not display this) wait until the Mede8er re boots itself +- 60 sec. Your Mede8er is now updated.

RE BOOT ONCE AND USE AS NORMAL.

XXXX DO NOT REMOVE POWER DURING THE UPDATE PROCESS xxxxx

NOTE: Once you update to V3 you cannot easily go back to older versions if you are using an internal Hard Drive that was formatted with the Mede8er. The update process will not damage your Hard Drive contents but the Hard Drive will then be shown as HDD1 instead of C. If you are not using an internal Hard Drive then you can roll back to an earlier version without any problems

- A) Do not update the Mede8er from the built-in update facility on the Setup screen
- B) If you experience Samba network connection problems we suggest you perform a "Restore Default" in setup Menu and re-boot the Mede8er.
- C) After the Firmware is installed please re-boot the Mede8er – Unplug DC Jack
- D) Do not do a Firmware Restore to update your Mede8er settings rather do it manually
- E) **Important:** Set your TV Resolution on the Main Setup Menu – Video System - for the first time after firmware update.

TV OUTPUT SETTINGS

Connect the Mede8er to your TV by one of the connection options on page 5 & 6 in the Mede8er User Manual. and change the input option on your TV to match. If you do not get to see the Mede8er GUI on your TV you will need to toggle the Mede8er TV output until you get a picture.



TV SYS Toggle Procedure

The Mede8er has three video output options ie Composite Video (yellow RCA connectors), Component Video (Red - Green- Blue connectors) and HDMI. Each output option also offers different screen resolution settings and these will need to be adjusted to match the type of TV used.

To change the Video Output on the Mede8er just press the TV SYS button on the remote and it will change the Video Output to the next available output option. If after pressing the TV SYS button you still do not get a picture then after a short pause press the TV SYS again until you see the Mede8er GUI on your TV. Keep repeating this procedure until you see a picture on your TV.

Once you see the Mede8er GUI on your TV then you must then enter the Video Setup mode and adjust the Video settings to match the screen size resolution of your TV.

AUDIO SETTINGS

HDMI Downmix (2 channel)

Use this setting if you are connecting the Mede8er directly to the HDMI input on your TV. The sound will be downmixed to 2 channel stereo.

HDMI Passthrough

Use this setting if you are connecting to the HDMI input of a Home Theatre Amplifier. The audio will be passed through as Bitstream or LPCM and the amplifier will do the multichannel decoding.

SPDIF Downmix (2 channel)

Use this setting to connect to an Amplifier via Toslink optical cable or Co-Axial Digital RCA cable. The sound will be downmixed to 2 channel stereo.

SPDIF Passthrough

Use this setting to connect to an amplifier via Toslink optical cable or Co-Axial Digital RCA cable. The sound will be passed through as Bitstream or LPCM and the amplifier will do the multichannel decoding.

Changelog: Mede8er-v3.0.2 3June2010

1. Fixed: ogg audio support
2. Fixed: wma audio support
3. Fixed: aac audio support
4. Fixed: Dolby Digital Plus support
5. Fixed: AAC 6 channel passthrough
6. Fixed: Audio player song total length time update on next song play
7. Fixed: Enable Folder Protection Setup Menu -- Zoom about.jpg and navigate up/down nav to a protected folder and press Play or Enter. Pin code screen appears and now wait about 30 sec and do not enter pin code. Mede8er bombs.
8. Fixed: Pin Protection "on" enter File Manager dont input code press return and go to Setup and switch Pin Protection "off" back to File Manager sometimes Mede8er bombs
9. Fixed: Select Movies Tab the Folder Playback Function plays previously played video and not the video within the Folder selected.
- 10 Fixed: Media Library -- Press number jump and quickly press setup button - layer beneath partly shows.
11. Fixed: 16 x 10 Screen size save
12. Fixed: .divx video files
13. Fixed: Italian "Formato HDD" change to "Formattazione HDD"

Known issues:

- o Network (SMB) write not available to Non-Mede8er-formatted HDD (NTFS-only) -- Under investigation
- o DVD resume on VIDEO_TS structure - Not working -- SDK
- o Repeat A-B on BDISO -- SDK
- o Restore from v1.x or v2.x backups -- not restoring all fields correctly
- o On certain 16:9 DVD menus - selection highlight is misplaced -- SDK issue
- o Simultaneous audio output via both HDMI and SPDIF -- SDK restriction
- o resume dialogue DVDISO -- SDK
- o resume play DVD VIDEO_TS -- SDK

Changelog: Mede8er-v3 1June2010

1. Added: Updated SDK
2. Added: BDISO and BDMV chapter support (No Menus)
3. Added: Icon based screens -- Menu - Goto - Subtitle
4. Added: Lock feature for Folder / Delete / File Manager/ HDD Format protection (Default password: 0000)
5. Added: Pin Protection on/off setting Setup Menu
6. Added: Folder Protection on/off setting Setup Menu
7. Added: Watched Indicator on/off setting Setup Menu
8. Added: Watched movie status indicator
9. Added: "A-B" button provides about.jpg in-folder zoom functionality (same as "SLOW")
10. Added: Play video directly from in-folder about.jpg preview (press "ENTER" or ">" to play movie)
11. Added: Play video file folder-- Play button
12. Added: Browse cover art "about.jpg" up/down nav
13. Added: Video Screen Transparency -- Setup Menu
14. Added: File or Folder rename -- Pre populate text window
15. Added: Change System Font -- Automatically picks up font.ttf on boot up. --
Place font.ttf in folder called "Resource" (case sensitive) on HDD or USB or SD Card on root
16. Improved: GUI updated
17. Improved: Media Library now remembers last state when returning
18. Improved: File Manager on-screen prompts
19. Improved: Screen size configuration in Setup menu determines about.jpg display area
20. Improved: Filter about.jpg and folder.jpg under "All" tab
21. Improved: SAMBA stability & performance for streaming & network copy
22. Improved: NAS startup after reboot
23. Improved: Music player
24. Improved: Language issues
25. Improved: Navigation of video files Media Library2 with preview "on"
26. Fixed: "Autoplay" from HDD or USB or SD Card -- removed stop & start icons during Autoplay
27. Fixed: Issues related to no internal HDD / no Mede8er-formatted HDD
28. Fixed: HDD format issues
29. Fixed: Mirrored MP3 tags issue
30. Fixed: DVD eject
31. Changed: In-folder JPG permitted display size increased to 5MB
32. Changed: Plasma Mode now only adjusts GUI transparency and not Screens during Video Play

Known issues:

- o Network (SMB) write not available to Non-Mede8er-formatted HDD (NTFS-only) -- Under investigation
- o DVD resume on VIDEO_TS structure - Not working -- SDK
- o Repeat A-B on BDISO -- SDK
- o AAC 6 channel passthrough - only stereo -- SDK related
- o Restore from v1.x or v2.x backups -- not restoring all fields correctly
- o On certain 16:9 DVD menus - selection highlight is misplaced -- SDK issue
- o Simultaneous audio output via both HDMI and SPDIF -- SDK restriction
- o Extension .divx unsupported -- SDK - temp fix rename file to .avi
- o resume dialogue DVDISO -- SDK
- o resume play DVD VIDEO_TS -- SDK
- o .ogg unsupported -- SDK

COVER ART PREVIEW

Mede8er has the built in facility to preview cover art and will read folder.jpg and about.jpg inside a folder. All you need to do in order to use this very useful feature is to arrange your collection with each video, in its own folder. Place a JPEG picture together with each movie in the folder and you will be ready to go. You can easily download DVD cover art for your picture or you can use the free program like YAMJ to Mede8er to make your folder.jpg and about.jpg pictures that will contain additional content information such as Synopsis, Cover, Rating, Year, Actors etc etc

IMPORTANT: V3 sets the still image size to the screen size settings in the Setup Menu. We recommend that you firstly set your screen size before viewing in folder full screen cover art.



Navigate to a folder. The JPEG picture inside will be displayed in the preview window.




To view the preview in full screen press the SLOW or A-B button.




PLAY FOLDER

V3 now allows you to play a video file within a folder without the need to open the folder. Just focus on the required folder and press the "Play" button. The first video file found in the folder will be played. The folder play will only work with video files.

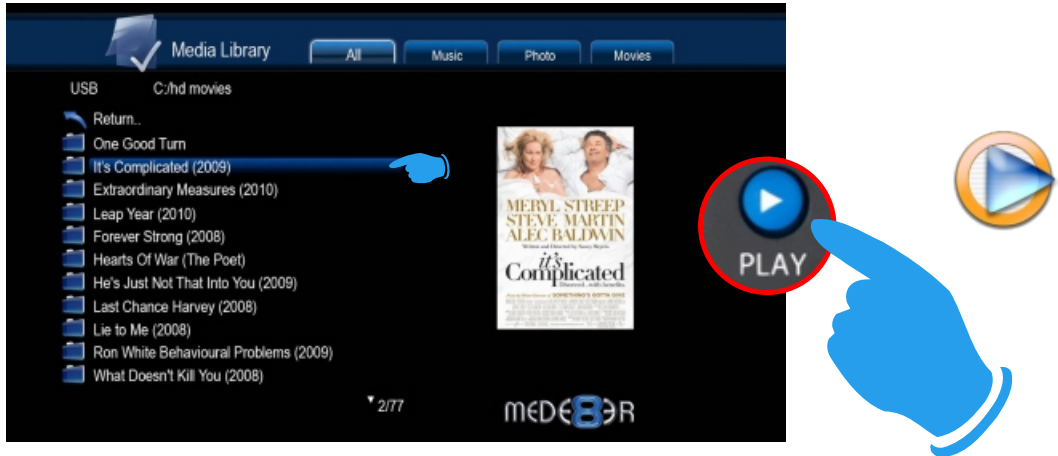

PLAY VIDEO FROM COVER ART

With V3 you can play the video directly from the cover art. Zoom the about.jpg by pressing the "slow" or "A-B" button then press Play or Enter to play the video.

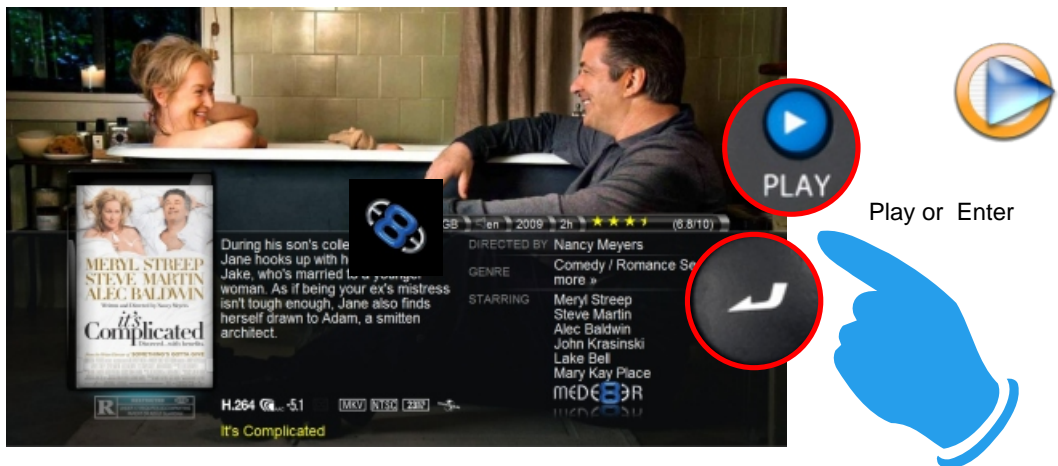

WATCHED INDICATOR

V3 is equipped with a watched video indicator feature. To enable this function go to Setup -- Misc -- Watched Indicator and switch it on. Mede8er V3 will mark the Video file with a eye icon once more than 10% of a video has been watched. You can also mark a video as watched or clear the watched icon manually. To do this focus on the file you require to change and press the Menu button. The Menu dialogue screen will be shown on screen and now you can mark the video as watched or remove the watched icon.



LOCK FACILITY

V3 has a built in Lock facility designed to restrict access to certain folders. Mede8er V3 has two lock facility functions ie

- a. System access areas such as Hard Drive Format screen and File Manager. (Pin Protection)
- b. User Folders (Folder Protection)

You can enable or disable these options in the Setup menu

CHANGE PIN CODE

The default 4 digit Pin Code is 0000.

To change the Pin Code go to Setup -- Misc -- Password -- You will be prompted to enter the existing pin code. For the first time you must enter the default factory pin ie 0000 then the Pin Code change screen will open. Now enter you new personal 4 digit code by pressing the numbers on your remote. Once you have entered the code press the "ENTER" button on the remote and the new code will be saved.


PIN PROTECTION

Enable Pin Protection to protect access to the Hard Drive Format area and the File Manager functionality. Once the Pin Protection is enabled you will be prompted to enter your personal 4 digit pin code when trying to gain access to these screens.



FOLDER PROTECTION

Folder protection will allow you to protect folders on the Local Hard Drive, USB Drive, SD Card or Network Shares (write enabled shares). To protect a folder focus on the folder and press the Menu button on the remote. Select the Lock icon and the folder will be locked. To unlock a folder focus on the folder and press the Menu button on the remote. Select the Unlock icon and you will be prompted to enter your Pin Code. After the correct code is entered the folder will be Unlocked

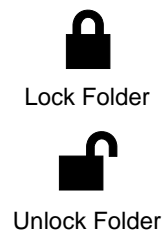

RESET PIN CODE

To reset the Pin Code re-install the V3 firmware and the Pin Code will default back to 0000

PLASMA MODE

The Plasma Mode has been changed on V3. The Plasma control will only change the transparency level of the GUI screens and will not have any effect on the screens during Video Play. The Plasma Mode has been designed for use with Plasma TV's that are susceptible to still image "burn in".

VIDEO SCREEN TRANSPARENCY

The Video Screen Transparency controls the transparency level of all video menus during Video Play. You have a choice of settings off, low or high.

AUTOPLAY

V3 allows for automated seamless folder play when the Mede8er is switched on. The autoplay facility is very useful and can turn the Mede8er into a very effective low cost Digital Signage Solution.

Autoplay Function

The Autoplay files can be stores on

- a. SD Card
- b. USB Drive
- c. Local HDD























1. Create a folder in the root of the drive named "Autoplay" (Case Sensitive)
2. Put either video OR audio files into this folder
3. If you require the files to play in order name them as foll

01name
02name
03name
03name
04name
05name
06name
07name
07name
08name
09name
10name
11name
up

Autoplay Operation

On power up the Mede8er will look for the "autoplay" folder and if found it will automatically play the contents of the "autoplay" folder. The contents will be played with the "repeat all" as default.

ICON TABLE

M E N U		Return
	arb	Rename
		Delete
		Mark as watched
		Remove watched indicator
		Lock Folder
		Unlock Folder
I N F O S C R E E N		WiFi
		Audio Info
		Replay
		Local HDD
		SD Card
		Wire Network
		Info
		Zoom
		USB
		USB DVD
	G O T O	
		Next / Previous Chapter
		Select Title
S U B T I T L E		Subtitle on/off & selection
	T	Text Encoding
	AA	Text Size
	A↕	Text Position
		Text Colour
		Text Sync