

User Manual



MED200X

High Definition Multimedia Player

MEDE8AR

INDEX

page 1	Index
page 2	Introduction
page 3	General Overview
page 4	Connections - Audio & Video
page 5	TV Output Settings
page 6	Remote Functionality - Firmware Update Procedure
page 7	Home Page
page 8	Media Scanner
page 9	Media Library
page10	File Manager - Single Files
page11	File Manager - Multiple Files
page12	Music Playlists
page13	Music Playlists continued
page14	Media Library - Music Player
page15	Video File Covert Art Preview
page16	Time Bar - Info Screen
page17	Goto - Video Search
page18	Subtitles
page19	Pictures

Thank you for purchasing the Mede8er Multimedia Player.

The MED200X is the latest generation multimedia player specially developed by Sanji for today's demanding media enthusiast. The Mede8er has been designed for good solid media playback from a USB device, SD Card, Internet or Local Network source. The User Interface is neat and intuitive without being complicated. Sanji has more than achieved their design goals by offering a media player that supports most of the popular media formats at a very affordable price.

Please check the Mede8er forum for the latest user guide. www.mede8erforum.com

Warranty

Mede8er products carry a 24 month from date of purchase warranty. In the event of warranty service please provide proof of purchase. Return your product to the store that it was purchased from or return it directly to Sanji Electronics (Pty) Ltd 106, 16th Rd Midrand, Gauteng, South Africa.

Warranty does not cover damage by

- a) Lightning or over voltage
- b) Water damage or liquid spill
- c) Misuse or abuse
- d) User tampering
- e) Using non Mede8er approved Firmware



Sanji Electronics is not responsible for any loss of data irrespective of the cause.

Important Safety Instructions

- Read these instructions for all components before using this product.
- Do not use this apparatus near water or moisture. Do not use this product near a bathtub, washbowl, kitchen sink, laundry tub, in a wet basement, near a swimming pool, or anywhere else that water or moisture are present.
- Clean only with a soft dry cloth and as directed by the manufacturer. Unplug this product from the wall outlet before cleaning.
- Do not block any ventilation openings. Install in accordance with the manufacturer instructions. To ensure reliable operation of the product and to protect it from overheating, put the product in a position and location that will not interfere with its proper ventilation. For example, do not place the product on a bed, sofa, or similar surface that may block the ventilation openings. Do not put it in a built-in system, such as a bookcase or a cabinet that may keep air from flowing through its ventilation openings.
- Do not install near any heat sources, such as radiators, heat registers, stoves or other apparatus that produce heat.
- Protect the power cord from being walked on or pinched, particularly at plugs, convenience receptacles, and the point where they exit from the apparatus.
- Only use attachments or accessories specified by the manufacturer.
- Unplug this apparatus during lightning storms or when unused for long periods of time to prevent damage to this product.

Refer all servicing to qualified service personnel


GENERAL OVERVIEW

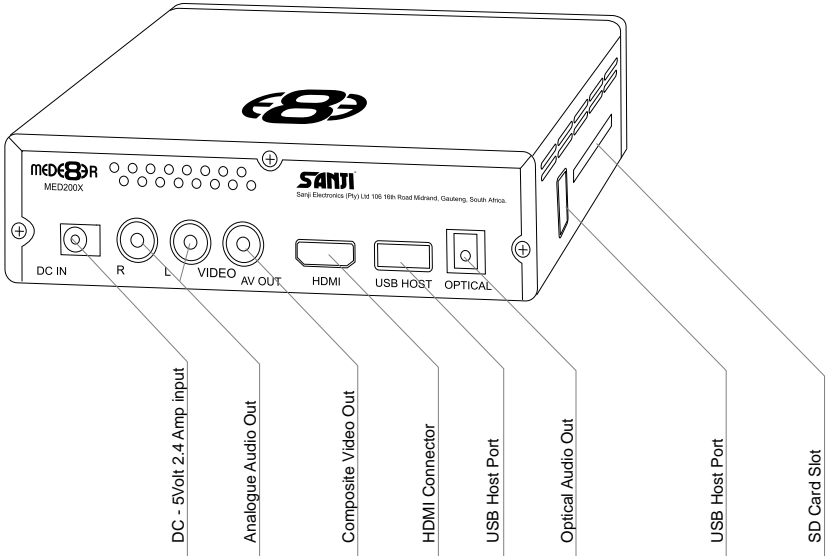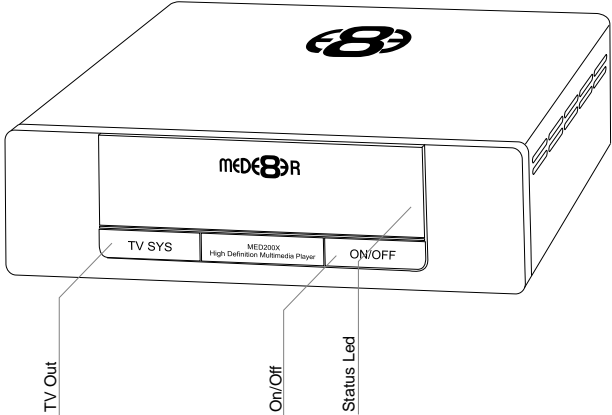

CONNECTIONS - AUDIO AND VIDEO


Analogue Audio and Composite Video connection to TV.

Composite Video offers the most basic picture quality connection and should only be used if your TV does not have a HDMI input. Use RCA analogue audio outputs in the absence of HDMI or Digital Audio inputs on your TV or Home Theatre system. RCA analogue outputs will output a downmix from multi-channel to stereo.

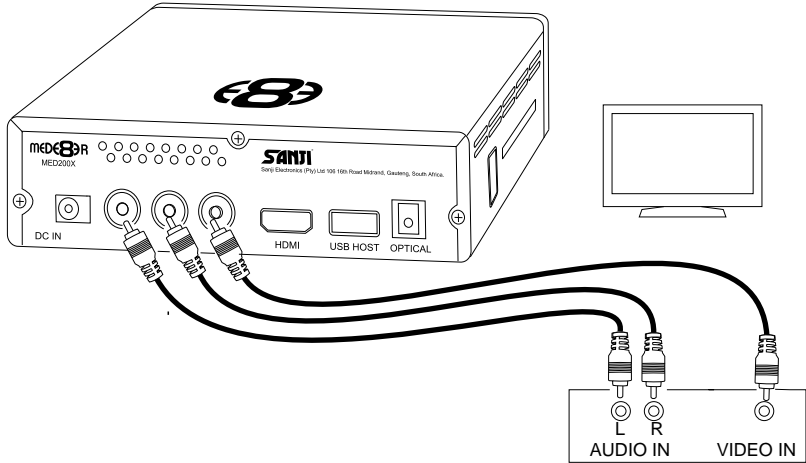

HDMI - RJ45 Network - Toslink Connection to a TV or Amplifier

For digital audio connection to your Home Theatre System use the HDMI connector. If your amplifier does not have HDMI connector then you can use the TOSLINK Optical Digital output. The MED200X supports both Passthrough and Downmix for both Dolby Digital and DTS signals.

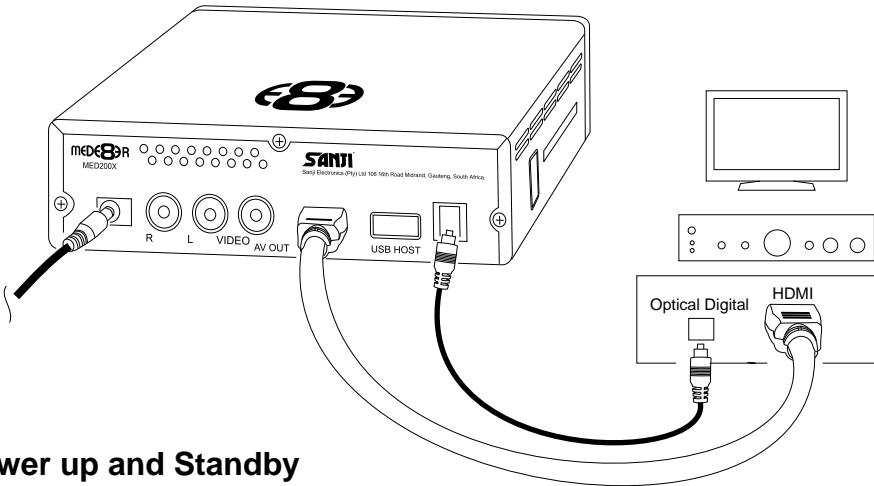

Power up and Standby

Plug the AC/DC adapter into the mains outlet and plug the DC Jack into the DC IN at the rear of the MED200X. **DO NOT USE ANY AC/DC ADAPTER AND ONLY USE THE ONE SUPPLIED** otherwise you may cause damage to the unit. Press the On/ Off button on the Mede8ers front panel and front facia LED will turn on Blue. You can put your Mede8er into standby by pressing the On/Off button on the remote. When in standby the front facia LED will turn Red.



TV OUTPUT SETTINGS

Connect the Mede8er to your TV by one of the connection options as shown on page 4 and change the input option on your TV to match the option you selected. If you do not get to see the Mede8er GUI on your TV you will need to toggle the Mede8er TV output until you get a picture.

TV SYS Toggle Procedure

The MED200X has two video output options ie Composite Video (yellow) RCA connectors and HDMI. Each output option also offers different screen resolution settings and these will need to be adjusted to match the type of TV used.

To change the Video Output on the Mede8er just press the TV SYS button or the TV SYSTEM button on the remote and it will change the Video Output to the next available output option. If after pressing the TV SYS button you still do not get a picture then after a short pause press the TV SYS again until you see the Mede8er GUI on your TV. Keep repeating this procedure until you see a picture on your TV.

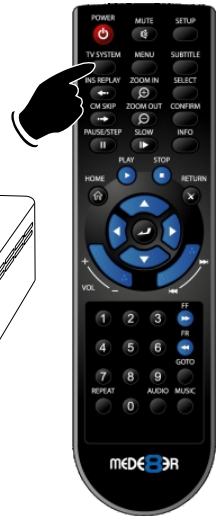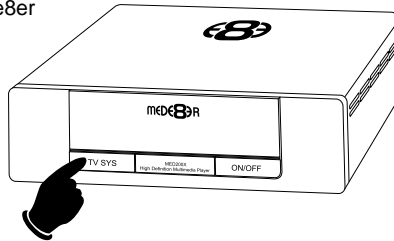

Once you see the Mede8er GUI on your TV then you must enter the Video Setup mode and adjust the Video settings to match the screen size resolution of your TV.

AUDIO SETTINGS

HDMI Downmix (2 channel)

Use this setting if you are connecting the Mede8er directly to the HDMI input on your TV. The sound will be downmixed to 2 channel stereo.

HDMI Passthrough

Use this setting if you are connecting to the HDMI input of a Home Theatre Amplifier. The audio will be passed through as Bitstream or LPCM and the amplifier will do the multichannel decoding.

SPDIF Downmix (2 channel)

Use this setting to connect to a Amplifier via Toslink optical cable. The sound will be downmixed to 2 channel stereo.

SPDIF Passthrough

Use this setting to connect to amplifier via Toslink optical cable. The sound will be passed through as Bitstream or LPCM and the amplifier will do the multichannel decoding.

REMOTE FUNCTIONALITY




FIRMWARE UPDATE

Download the latest Mede8er Firmware from www.mede8erforum.com.

UnZIP or UnRAR the file and you will find one file named install.img. Copy this file to the root directory of a Flash Drive. Plug the flash drive into the Mede8er. Disconnect the power jack at the rear of the Mede8er then plug it back in - Now press the on/off button and hold it pressed for 10 seconds and then release.

After approximately 15 seconds the LED on the Mede8er will flash red-blue and you will get a progress bar on your TV display (some TV's will not display this) wait until the Mede8er re boots itself +- 4 minutes. Your Mede8er is now be updated.

DO NOT REMOVE POWER DURING THE EMERGENCY RECOVERY PROCEDURE.

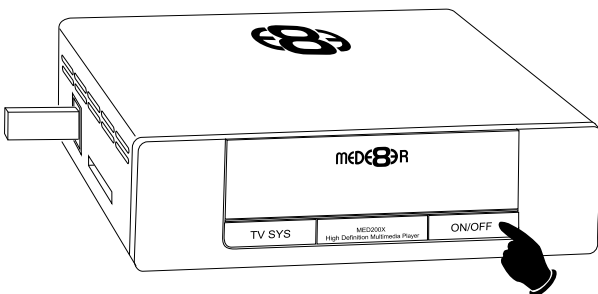

Power Up and hold on/off button for 10 seconds

HOME PAGE

The Mede8er Home Page is the central point where you can launch all the user applications. Press the Right/Left Navigation buttons on the remote to navigate the Home Page and press "Enter" to launch the selected page.




MEDIA LIBRARY

In Media Library you can browse all your media content and launch the built in File Manager to manage and transfer your content.



MOVIES

The Movies page will display all information about Video Files and allow you other functionality such as search, most viewed and recently added.

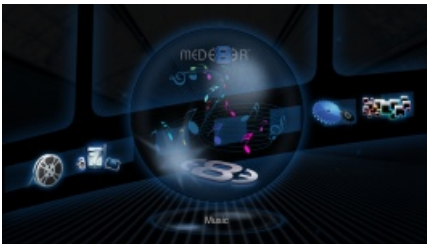


MUSIC

The Music page will display all information about your Music Files and allow you other functionality such as Search and filtering options such as sort by -- Albums, Artists, Genres, Year and access to Playlists.



PICTURES

The Pictures page will display all information about your Pictures and Images and allow you other functionality such as Search and filtering by recently added and recently viewed.

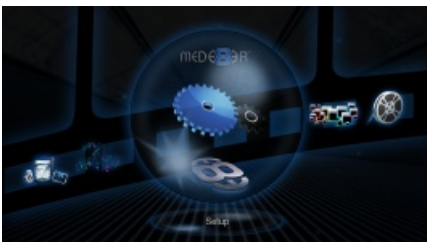

SETUP

The Setup page is the area where you personalize the setup option for your needs

MEDIA SCANNER

The Mede8er has a built in Media Scanner that will scan all your Media Files and allow user functionality such as Search, Genre, Last Played etc. You can select "Auto Scan" options in the Setup menu. The Media Scanner will automatically update the database when the Mede8er is powered "on" or when an external USB Hard Drive is connected. It is important to let the scanner complete the scan if you intend to use this function. Progressive scans take less time than the original scan as only new information is added to the database. To use the Media Scanner information select either Movies, Music or Pictures from the Home Page and then press the "Menu" button.


Movies



Music




Pictures

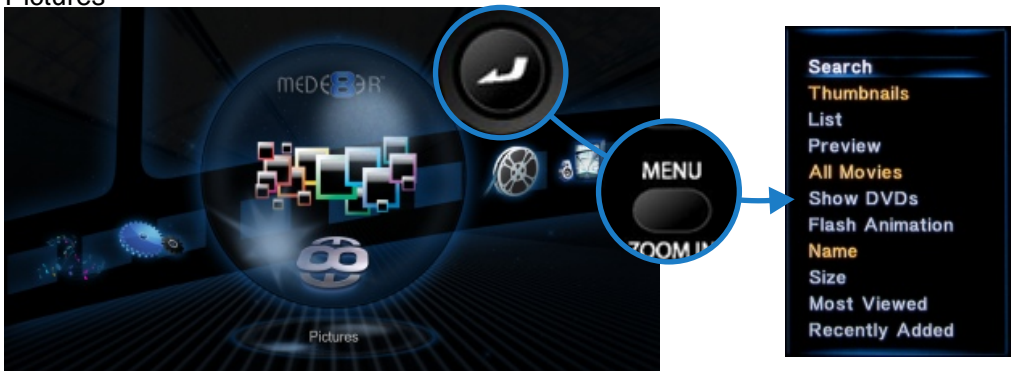

MEDIA LIBRARY

Use the Media Library to browse all your media files. The Mede8er allows you to customise the Media Library view to suit your personal needs. To change the view just press the “Menu” button on the remote and a dialogue screen will open on the bottom right hand side of the screen. The current selection will be highlighted in yellow. You can choose between File View, Preview View and Thumbnail View.

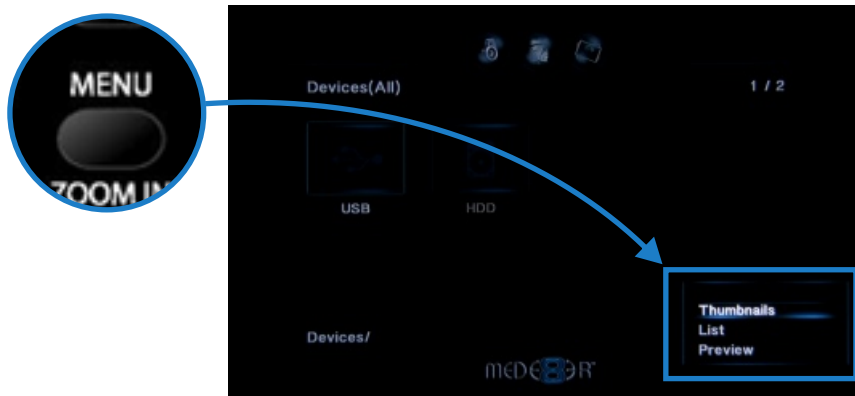


FILE VIEW

In File View all files and folders are listed in a traditional file layout across the entire screen.



PREVIEW VIEW

Preview Screen is similar to File View with the addition of a preview window on the left hand side.

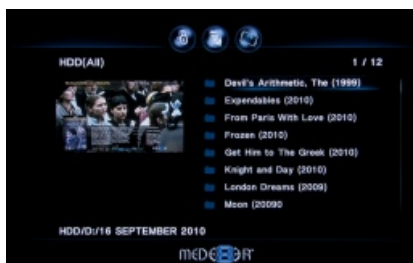


THUMBNAIL VIEW

Thumbnail View displays all files and folders in a grid layout. If any folders have images inside then the Mede8er will display the image as a thumbnail. (The image that will be displayed is the first image in alphabetic order that is found inside the folder).




FILE MANAGER

The Mede8er has a built in File Manager to manage and transfer files between your media sources. The File Manager is launched by pressing the “Edit” button on the remote Control while you are Media Library.

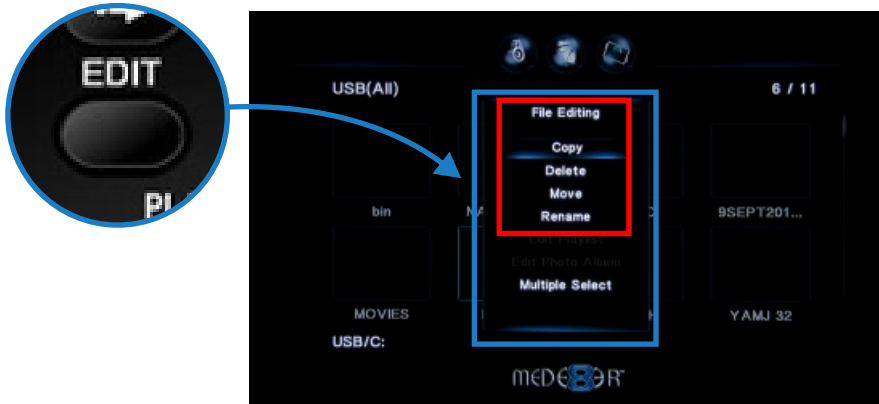


FILE MANAGER - SINGLE FILE

To Copy, Delete, Move or Rename a single file just focus on the file (that you require to perform the action on) and press the “Edit” button on the remote control. Select the option you require and press “Enter”. Follow on-screen instructions.

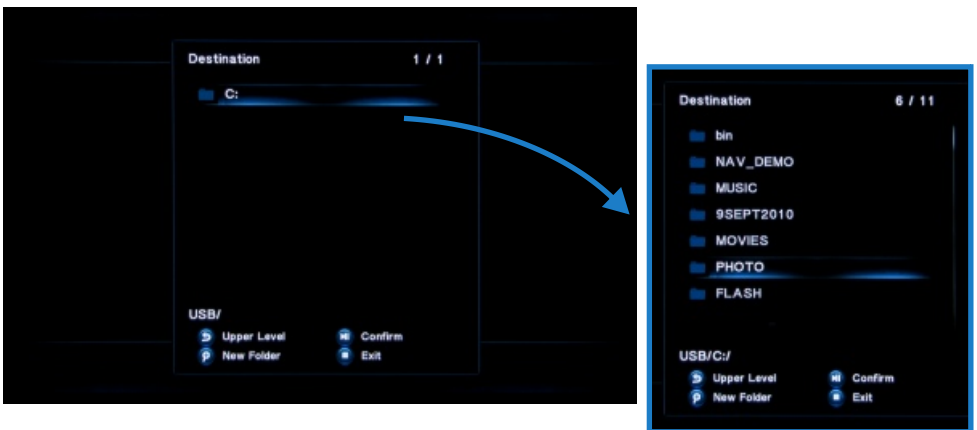

FILE MANAGER - MULTIPLE FILES

To Copy, Delete, Move or Rename multiple files just press the “Edit” button on the remote control while you are in Media Library view. Select “Multiple Select” and a new dialogue screen will open.

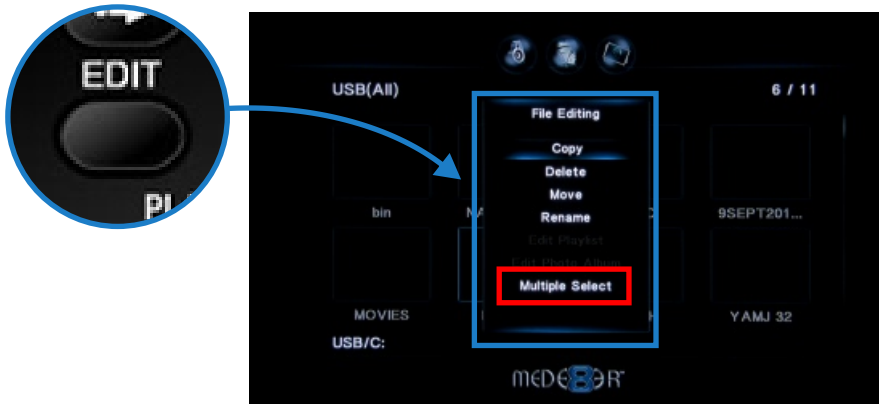


Navigate to the files or folders on the left screen “A” that you want to perform the action on and press the “Select” button to add the files to the File List “B”.




Once you have selected all the files you require to perform the action on then press the “Right Navigation” button. The focus will change to “B”. Now you have options to Clear All, Remove from list, or Edit. To continue you must select “Edit” and then follow on-screen instructions.

MUSIC PLAYLISTS

With the Mede8er you can create multiple music Playlist's from the remote control.

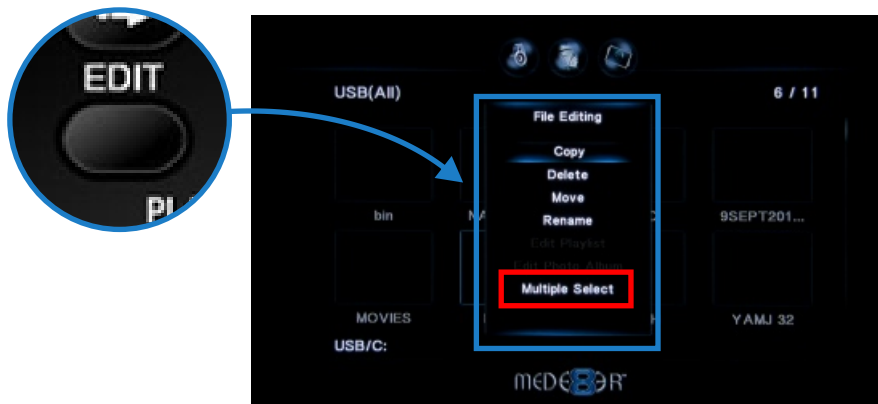


Open Media Library and press the "Edit" button and select Multiple Select.

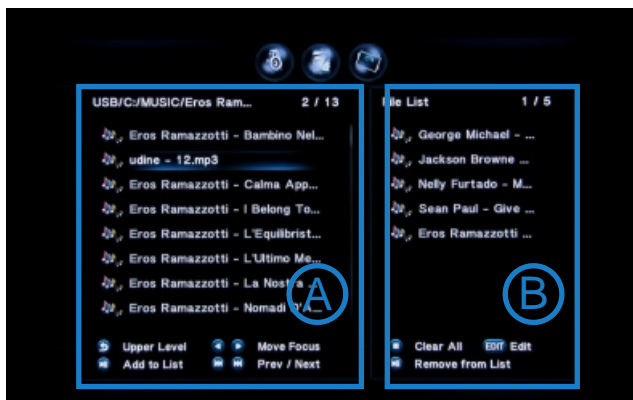



On left hand side screen "A" navigate to your music files and press "Select" on the music files you want to add to the File List Window "B". Once you are complete press the right navigation button and the focus will change to the right hand screen "B". You can now edit the list or press "Edit" to continue. A new dialogue screen will open and now you can select "Save Playlist".

MUSIC PLAYLIST'S CONTINUED

With the Mede8er you can create multiple music Playlist's from the remote control.

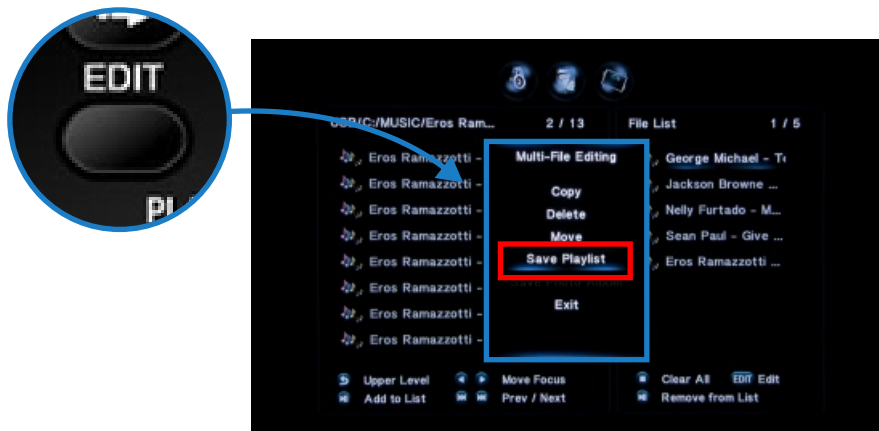


Open Media Library and press the "Edit" button and select Multiple Select.

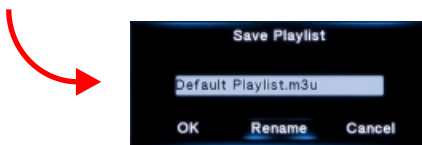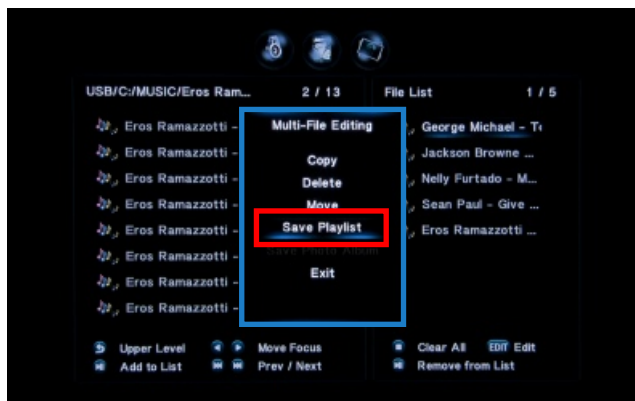







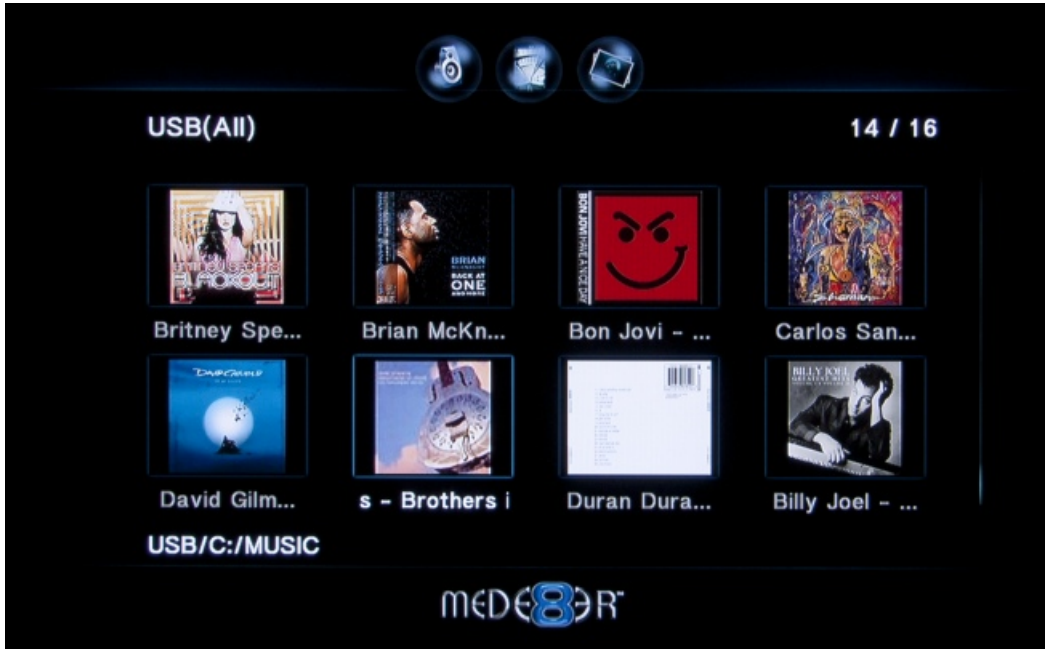

On left hand side screen "A" navigate to your music files and press "Select" on the music files you want to add to the File List Window "B". Once you are complete press the right navigation button and the focus will change to the right hand screen "B". You can now edit the list or press "Edit" to continue. A new dialogue screen will open and now you can select "Save Playlist".

MEDIA LIBRARY - MUSIC PLAYER

If you select "Menu" and then "Thumbnail View" you will be able to browse your music collection by embedded cover art.



USB(AII) 14 / 16

 Britney Spe...	 Brian McKn...	 Bon Jovi - ...	 Carlos San...
 David Gilm...	 s - Brothers i	 Duran Dura...	 Billy Joel - ...

USB/C:/MUSIC

MEDE8R



Music 1 / 9


Dina Carter - Strawberry Wine.mp3
Genre: (2)
Artist: Faith Hill
00:00:02 00:04:50

- Strawberry Wine.mp3
- George Michael - Too Funky.mp...
- George Michael Too Funky (Dan...
- Jackson Browne & Timothy B S...
- Marco Antonio Solis - Antes de...
- Nelly Furtado - Man Eater.mp3
- Paris Hilton - The Stars Are Bli...
- Sean Paul - Give It Up To Me.m...

MEDE8R

VIDEO FILE COVER ART PREVIEW

To browse your Media Library by cover art just select "Menu" and then "Thumbnails" and the Mede8er will preview the cover art in a grid view. You can navigate the library by using the Navigation Buttons ie Left, Right, Up and Down. Select the folder you require and press "Enter". A new screen will open showing the contents of the folder.

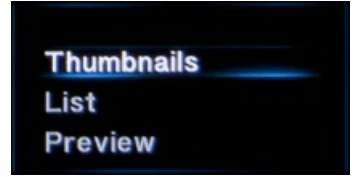


All you need to do in order to use this very useful feature is to arrange your collection with each video, in its own folder. Place a JPEG picture together with each movie in the folder and you will be ready to go. You can easily download DVD cover art for your picture or you can use the free program like Y2M (YAMJ to Mede8er) to make your folder.jpg and about.jpg pictures that will contain additional content information such as Synopsis, Cover, Rating, Year, Actors etc etc




TIME BAR - INFO SCREEN

To display the Mede8er Time Bar press the Right or Left Navigation buttons on the remote during video play. The Time Bar screen will show and display the current time and the total length of the video. The Time Bar will dynamically update the current position in minutes as you press the right or left navigation buttons. To go forward or backwards in time just press the right or left navigation button continually and release when you arrive at the required time in the video.

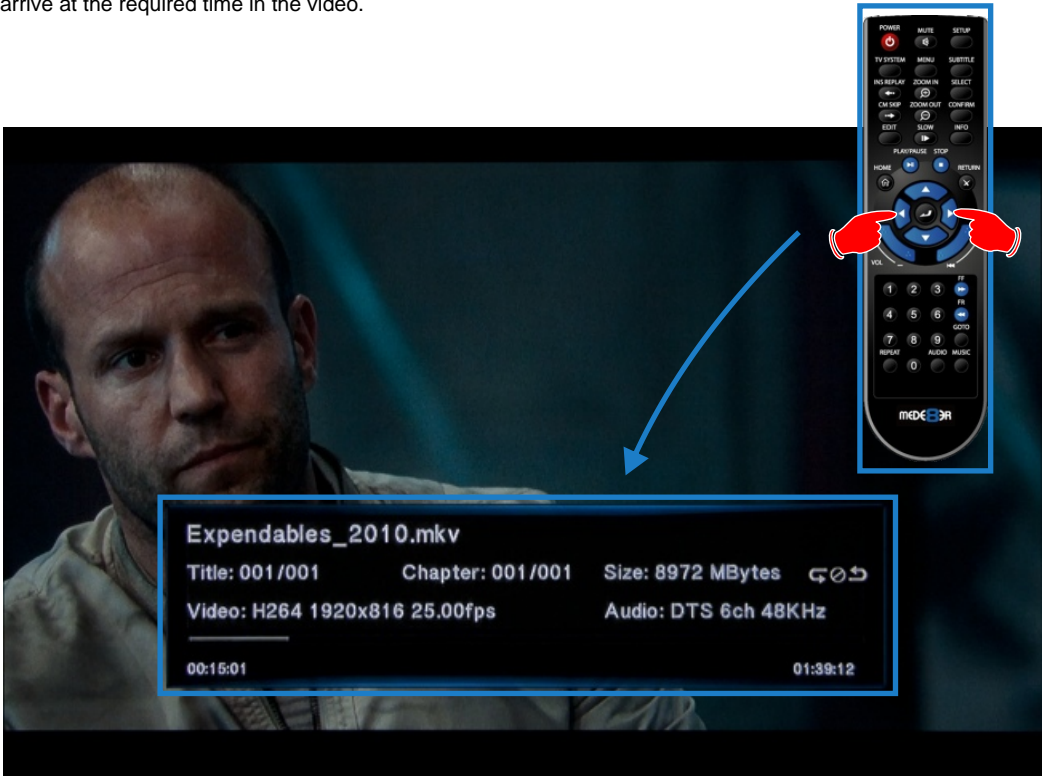

The Time Bar also displays information about the video file being played.

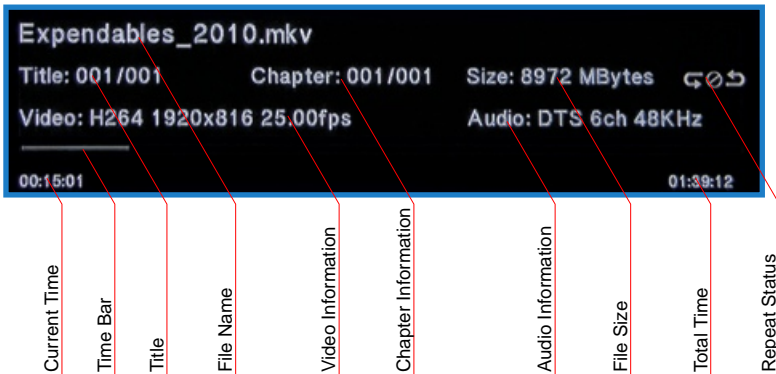

GOTO - VIDEO SEARCH

Press the GOTO button on the remote and the GOTO dialogue screen will open. The GOTO screen allows you to change Time, Title, and Chapter. Press the Up/Down/ Left/Right Navigation buttons to change the value then press "Enter" once you have made your selection. To remove the screen press GOTO button again or press the Return button.




SUBTITLES

Mede8er supports various types of subtitle files. If the subtitle is embedded into the video file it will automatically be available on the Subtitle Dialogue Screen. External Subtitles must be placed into the same folder as the video file and must be named to be exactly the same name as the video file eg

Cloudy.With.A.Chance.Of.Meatballs.2009.720p.BluRay.HebDub.x264-WiKi.mkv
Cloudy.With.A.Chance.Of.Meatballs.2009.720p.BluRay.HebDub.x264-WiKi.srt

To access the Subtitle screen press the Subtitle button on the remote during video play.

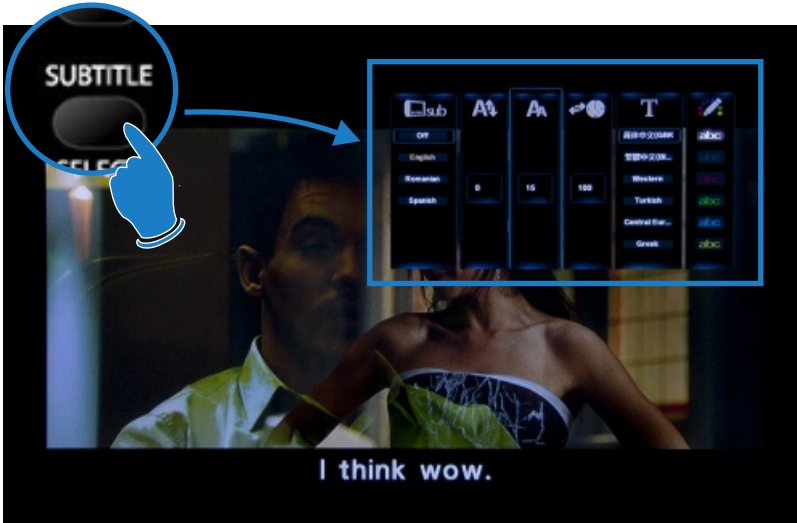

Subtitle Select

Subtitle Position

Subtitle Size

Subtitle Option Focus

Subtitle Time Sync

Subtitle Language

Subtitle Colour

PICTURES

If you select "Menu" and then "Thumbnail View" you will be able to browse your picture collection by grid thumbnail view. Select a picture and it will zoom to full screen. Now for more options press the "Menu" button on the remote and you will have a host of extra options.





High Definition Multimedia Player

www.mede8erforum.com

MED200X

www.mede8er.com www.mede8er.eu

For more information or support please visit
www.mede8er.eu/support/
or call +31(0)10-7142861 during business hours.